

THE ANTI LEG BOILER VALVE Will be available at any plumbers merchants or similar outlet. Decide into which heater pipe it is going to be fitted. There are two pipes leading from the Z shaped return fitting located on top of the engine to the heater box. The longer one on the distributor side is the inlet, and the shorter one on the exhaust side is the outlet. The valve can be fitted to either pipe, and when closed will completely stop the flow of hot water to the heater. I chose the short pipe as I felt that the valve would be better supported.

Place a square metre of polythene under the pipes and turn up the edges to catch the coolant, and remove both pipes from the Z fitting, then take off the chosen pipe and take it with you to the plumbers. You want a valve that will fit in the pipe, will allow free flow when open and total closure when shut whilst leaving enough of the heater pipe at either end to reconnect.

If you have any problems with any of the above ramblings don't hesitate to give me a ring. Jim Burnhill, Tel 01274 872470.

